

IX.5.1 FORECAST SYSTEM DATA BASE ACCESS GENERAL INFORMATION

Any program that accesses the Forecast System data bases must call the routine UPRIMO to set input and output units. There are no arguments for routine UPRIMO.